


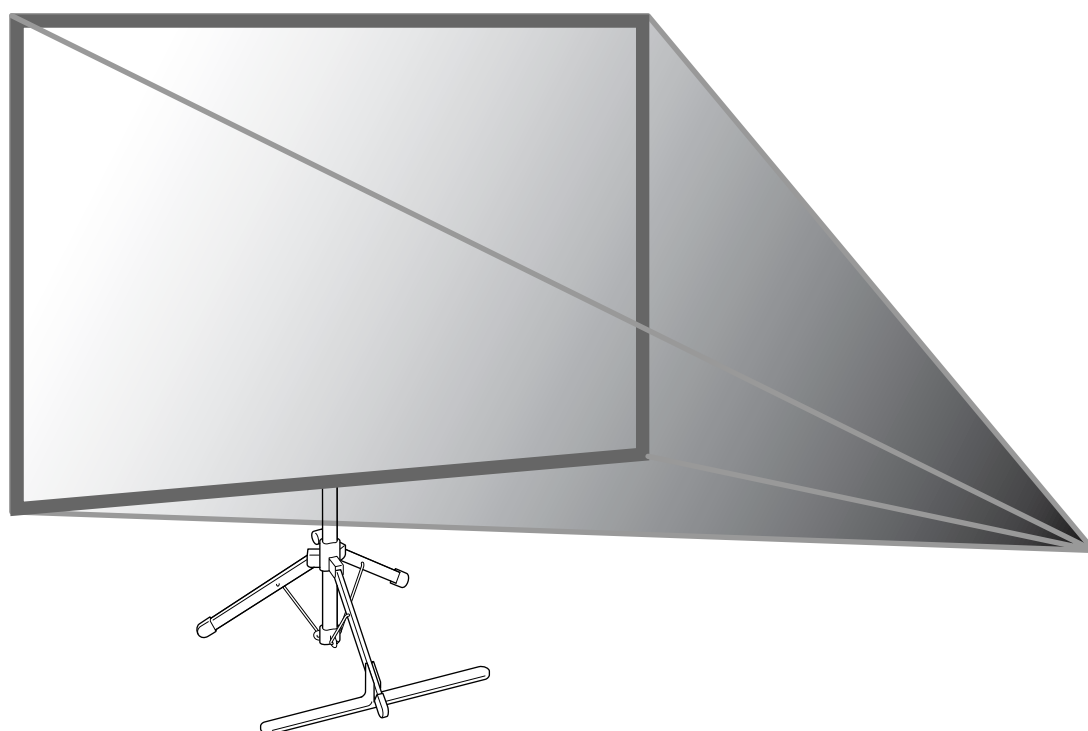

Mobile Screen (X type) / モバイルスクリーン(Xタイプ) ELPSC21/ELPSC21B



EN User's Guide 1

IT Guida utente 17

FR Guide d'utilisation 5

ZHS 使用说明书 21

DE Benutzerhandbuch 9

ZHT 使用說明書 25

ES Manual de usuario 13



JA 取扱説明書 29

Mobile Screen (X type) ELPSC21/ELPSC21B

Warnings and Precautions

Read this document carefully to use this product safely and correctly. Keep this information with the screen so that it can be used to solve any problems that arise.

Explanation of symbols

 Warning	This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.
 Caution	This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

Warning

- ◆ **Do not set up the screen near any kind of heater or cooker.**
The screen is made from plastic materials and may catch fire.

Caution

- ◆ **Do not set up the screen on a slanted or unstable surface.**
It could fall over and cause an injury.
- ◆ **Extend the tripod properly and steady the screen before using it.**
If you install or remove the screen without extending the tripod properly, it could fall and cause an injury.
- ◆ **Do not hang from the screen or hang any objects on the screen.**
If there are young children in the house, make sure that they do not play with the screen. It could pinch their fingers, or fall over and cause an injury.
- ◆ **Do not disassemble or modify the screen.**
Parts may spring out and cause an injury.
- ◆ **Be careful not to pinch your finger when setting up or storing the screen and stand.**
- ◆ **Be careful when storing the screen.**
The screen could fall and cause an injury.
- ◆ **Do not set up the screen where it is exposed to wind or drafts.**
The screen may be blown over if it is set up outdoors, in front of an open window, or in front of a fan or air conditioner. If the screen falls, it may cause an injury.
- ◆ **Do not play with the shafts or use them for other purposes.**

Problem Solving

If you notice any damage or anything unusual, stop using the screen immediately and contact the store where you purchased it.

Notes on Disposal

Dispose of the screen properly in accordance with your local regulations. If relevant, follow company regulations. Refer to the following for more information.


Screen material: Polyvinyl chloride
Stand material: Steel/Aluminum

Storage case material: Nylon
Shaft material: Aluminum


Notes on Usage and Storage

- ◆ The surface of the screen has been treated with chemicals to improve the images that are reflected on it. The quality of the reflected images decreases if the surface of the screen is scratched or dirty. Note the following points when handling the screen to prevent damaging it.
 - Do not touch the white part of the screen with your hands.
 - Do not write on the white part of the screen with a pencil, magic marker, or anything else. If you do write on it by accident, it cannot be erased.
 - Do not wipe the white part of the screen with a damp cloth, benzene, thinner, or anything else.
 - Use a dry cloth or a soft brush to dust the white part of the screen. Make sure you extend the tripod and steady the screen when cleaning it.
 - Do not use or store the screen in a dusty area.
 - Do not use or store the screen in places that are hot or humid.
 - Store the screen within a range of -10 to 50 °C.
 - * **Do not leave the screen where the temperature may go above 50 °C, such as inside a car.**
 - When you have finished using the screen, be sure to store it in the storage case to keep the screen in good condition. When rolling up the screen, make sure there are no insects or other things stuck to the white part of the screen.


Dimensions (Unit: mm)

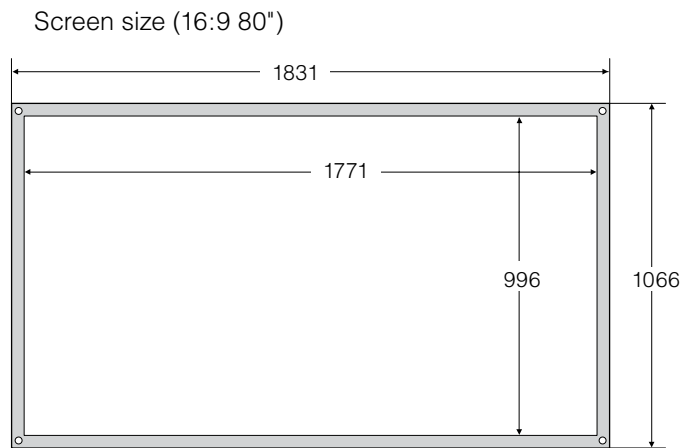


Side view

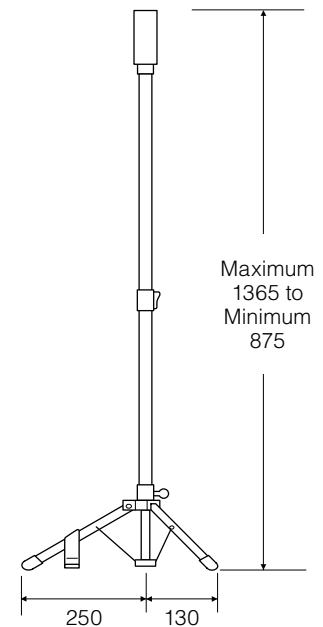

Folded

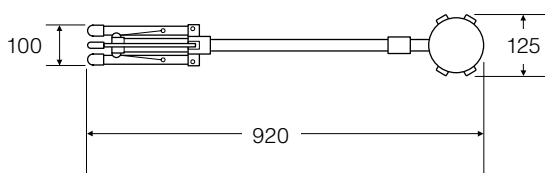

Storage case

 


Weight: approx. 3.8 kg


Hanging the Screen

- You can also hang the screen on a wall.
 - Hang the screen with commercially available straps, wire, string, or other material.
 - Use materials that can support the weight of the screen.
 - The weight of the screen is approximately 1.9 kg.


Caution Use a safety line to prevent the screen from falling while it is hanging on a wall.
If the screen falls on a person, it may cause an injury.

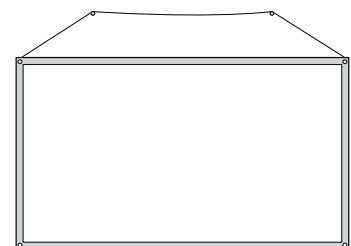

Included Items

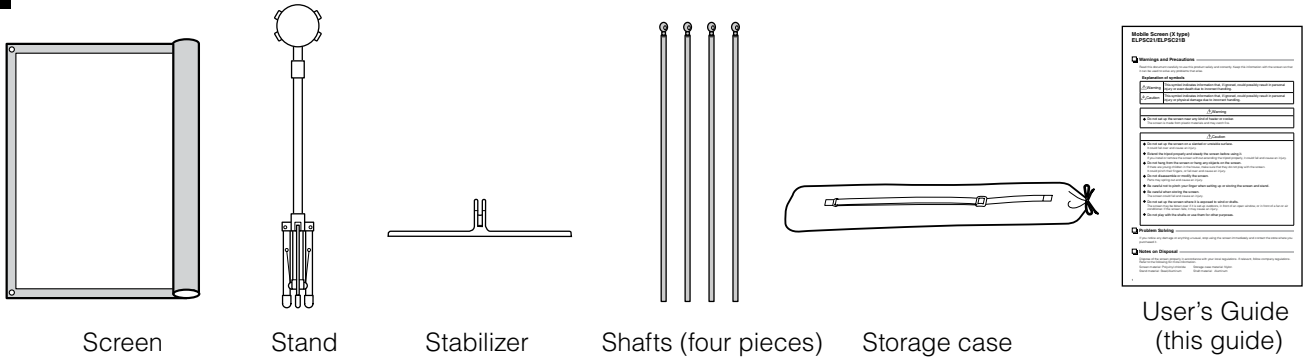

Part Names (Completion drawing)

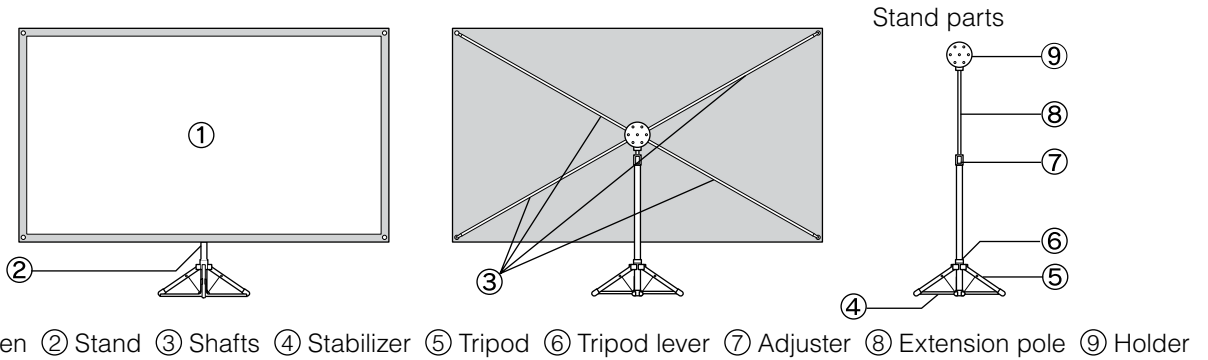

Setting Up

1 Take out the screen, stand, shafts, and stabilizer from the storage case.

2 Set up the stand.

① Push down the tripod lever and extend the tripod. The tripod lever should be on the rear side of the screen.

Caution Push the tripod lever all the way down.

If the tripod is not extended completely, it could fall and cause an injury.

② Attach the stabilizer to the front leg of the tripod. Slide the stabilizer so that both the front leg and the bottom of the stabilizer sit on the floor.

* Make sure you always use the stabilizer. If you set up the screen without using the stabilizer, it may fall and cause an injury.


3 Insert the shafts into the holder.

① Match the numbers on the shafts with the numbers on the label on the back of the holder.

② Insert the shafts with the ① labels into the ① holes on the holder, and with ② labels into the ② holes of the holder. Insert the shafts with all the labels facing the same direction until you hear a click.

● When hanging the screen on a wall.

① Remove the screw at the junction of the holder and extension pole and remove the holder before inserting the shafts.

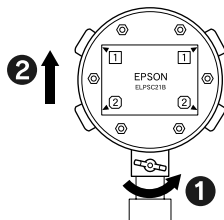

② Twist a string or a wire around the upper ends of the top two shafts (label ①).

