 
 
 
70mm

Congratulations on your new GitUp Action camera!

This Quick Start Guide will show you the basic instructions. Please read it carefully and we hope you enjoy using your new action camera!







CHARGING THE BATTERY

- Press and hold this part to unlock the knob, then rotate to open or close. Please follow the arrows for the right direction



Press to unlock the battery cover, Rechargeable Battery then push it out.

1. Remove the camera from the waterproof housing

- (if it's in the waterproof housing) 2. Insert a MicroSD card (sold separately). Class 6 or above required,
- or a UHS-I card

3. Open the battery cover and insert the battery (normally a battery is already installed)

4. Charge the battery by connecting the camera to a computer or other USB charging adapter using the included USB cable. The camera status light turns on during charging

NOTICE: Using wall chargers marked: output 5V 1A.If you don't know the voltage and current of your charger, use the included USB cable to charge the camera from your computer or a power bank.

POWERING CAMERA ON AND OFF

To Power On: Press the Power/Mode button [2] for two seconds. To Power Off: Press and hold the Power/Mode button [] for four seconds.



1. Press the Power/Mode button [] repeatedly to cycle through the camera modes.

Camera Modes	Description
Video Video	Video, Time Lapse Video, Video + Photo, Video Looping
Photo	Single, Time Lapse Photo
Playback	Play content on the camera or a TV
Setup	Adjust general camera settings

2. If necessary, select a different capture mode: a) Press the Setting/Wi-Fi button [@] to open the settings menu. b) Press the Shutter/Select button [6] repeatedly until you get to the desired capture mode. c) Press the Setting/Wi-Fi button [] to close the settings menu.

eo and Ph

Select your camera mode, then press the Shutter/Select button to start/stop recording or take a photo.

 
Take photo while recording

When the camera is recording, you can press the Power/Mode button [🙆] to take a photo.

imera Set

1. Press the Power/Mode button [2] to cycle to your desired mode. 2. Press the Setting/Wi-Fi button [) to enter the Settings menu for that mode. 3. Press the Power/Mode button [] to cycle through the options. 4. Press the Shutter/Select button [() to select your desired option. 5. Press the Setting/Wi-Fi button [🛞] to exit the settings menu.

The GitUp App allows you to control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, playback and video/photo download.



1.Enable the Wi-Fi

If the camera is powered on and ready to capture videos or photos, you can press and hold the Settings/Wi-Fi button [🛞] for three seconds to turn Wi-Fi on/off. When Wi-Fi is on, a Wi-Fi status icon appears on the camera status screen and the blue Wi-Fi light blinks intermittently. The Wi-Fi SSID and password is shown on the camera screen, default password is 12345678. Notice: When the Wi-Fi is enabled, the camera is waiting for the Wi-Fi connection with smartphone or tablet, you can not take video or photo until the connection established.

2. To Connect your camera to the GitUp APP:

a). Download and install to your smartphone/tablet the supported GitUp application from the Apple App Store or Google Play b). Power on the camera and enable the Wireless c). Connect to the Wi-Fi connection named Gitup**** (the stars are different for each camera) d). Open the application, click the [+] to add the camera, the application will automatically search for a camera and show "Add device succeeded" on the screen if connected successfully. e). Click the [🕑] icon to live preview the video.









Short Connector Long Screw and Short Screw Long Connector



Curve Adhesive Mount Lens Cover USB Data/Charging Cable





Lens Cover USB Data/Charging Cable














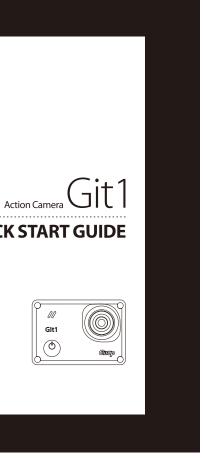



Holder

External Microphone

Wrist Remote

Frame

FPV Cable

GAU

QUICK START GUIDE