# ЛОС

## LCD Monitor User Manual I2481FX/I2481FXH I2381F/I2381FH I2281FW/I2281FWH (LED Backlight)



Safety	
National Conventions	
Power	5
Installation	6
Cleaning	7
Other	
Setup	9
Contents in Box	9
Adjusting Viewing Angle	
Connecting the Monitor	
Adjusting	12
Setting Optimal Resolution	12
Windows 8	12
Windows 7	14
Windows Vista	
Windows XP	
Windows ME/2000	19
Hotkeys	
OSD Setting	
Luminance	23
Image Setup	
Color Setup	
Picture Boost	
OSD Setup	
Extra	
Exit	
LED Indicator	
Driver	
Monitor Driver	
Windows 8	
Windows 7	43
Windows Vista	47
Windows XP	49
Windows 2000	52
Windows ME	
i-Menu	53
e-Saver	54
Screen+	55
Troubleshoot	
Specification	58
General Specification (I2481FX)	58
General Specification (I2481FXH)	59
General Specification (I2281FW)	60
General Specification(I2281FWH)	
General Specification (I2381F)	

	General Specification (I2381FH)	63
	Preset Display Modes (I2281FW/I2381F/I2481FX)	64
	Preset Display Modes (I2281FWH/I2381FH/I2481FXH)	65
	Pin Assignments	66
	Plug and Play	68
Reg	gulation	
	FCC Notice	69
	WEEE Declaration	70
	WEEE Declaration for India	70
	RoHS Declaration for India	70
	EPA Energy Star	71
Ser	vice	72
	Warranty Statement for Europe	72
	Warranty Statement for Middle East and Africa (MEA)	74
	AOC International (Europe) B.V.	76
	Warranty Statement for North & South America (excluding Brazil)	77
	EASE PROGRAME	79

## Safety

## **National Conventions**

The following subsections describe notational conventions used in this document.

#### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

### **Power**

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V ~, Min. 5A

A The wall socket shall be installed near the equipment and shall be easily accessible.

For use only with the attached power adapter (Only for monitors with power adapter). Factory: I2381F/I2381FH TPV ELECTRONICS(FUJIAN) CO., LTD ADPC1938EX: Input: 100-240VAC 20/60Hz Max1.3A Output: 19VDC, 2A L&T DISPLAY TECHNOLOGY(FUJIAN)LTD. ADPC1938EX: Input: 100-240VAC 20/60Hz Max1.3A Output: 19VDC, 2A I2281F/I2281FW/I2481FX/I2481FXH TPV ELECTRONICS(FUJIAN) CO., LTD ADPC1925EX: Input: 100-240VAC 20/60Hz Max1.3A Output: 19VDC, 1.31A L&T DISPLAY TECHNOLOGY (FUJIAN)LTD. ADPC1925EX: Input: 100-240VAC 20/60Hz Max1.3A Output: 19VDC, 1.31A

## Installation


Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Do not place the front of the product on the floor.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed with the stand:

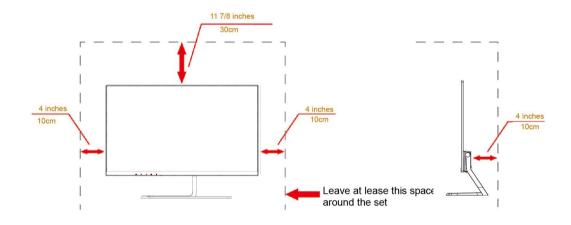


## Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

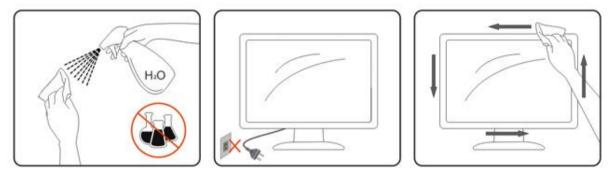

## Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

AMake sure that the ventilating openings are not blocked by a table or curtain.


PDo not engage the LCD monitor in severe vibration or high impact conditions during operation.

For display with glossy bezel the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

If the phone on the base of LCD monitor when the phone calls will affect the circuit characteristics, may cause the screen to mute or screen interference.

## Setup

## **Contents in Box**

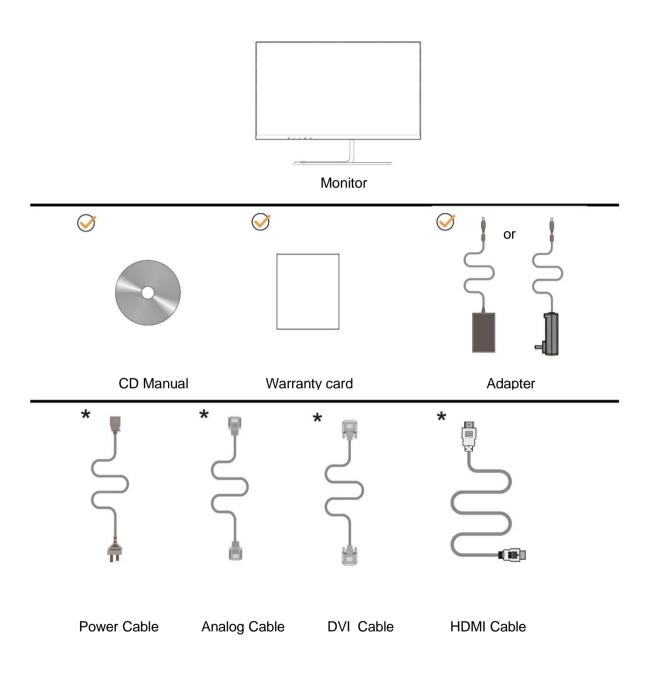

Not all signal cables (Analog,DVI,HDMI) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.

## **Adjusting Viewing Angle**

For optimal viewing, it is recommended to look at the full face of the monitor, and then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor's angle from -3° to 19 °.




\* Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.


\* Do not put your hand close to the gap between the monitor and the base to avoid the injury when adjusting the viewing angle

\* Do not adjust the viewing angle over 19 degrees in order to avoid damage.

## **Connecting the Monitor**

Cable Connections In Back of Monitor and Computer:

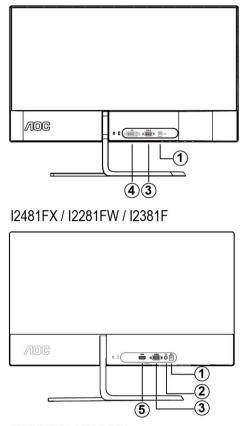

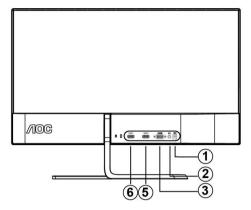

I2481FXH

#### I2281FWH / I2381FH

- 1 DC port
- 2 Earphone
- 3 D-SUBI
- 4 DVI
- 5 HDMI-1
- 6 HDMI-2

To protect equipment, always turn off the PC and LCD monitor before connecting.

- 1 Connect the adapter cable to the DC port on the back of the monitor.
- 2 Connect one end of the D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.
- 3/4 Optional (Requires a video card with HDMI port) Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.
- 5 Optional (Requires a video card with DVI port) Connect one end of the DVI cable to the back of the monitor and connect the other end to the computer's DVI port.

6 (Optional-for machine type with headset function) Connect the headset to headset port in the back of monitor..

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

## Adjusting

## **Setting Optimal Resolution**

#### Windows 8


#### For Windows 8:

1. Right click and click **All apps** at the bottom-right of the screen.



Apps				
o <sup>Eing</sup>	D Reader		WordPad	Computer
Calendar	SkyDrive	Calculator	XPS Viewer	Control Panel
Carnera	Sports	Character Map		Default Programs
Desktop	Store	Math Input Panel	Magnifier	File Explorer
Finance Finance	111 Iravel	Notepad Notepad	Navrator	Help and Support
Games	Video	of Paint	On-Screen Keyboard	🗾 Run
internet Explorer	Weather	Remote Desitop Connection	Windows Speech Recognition	🛵 Task Manager
Mail		Snipping Tool		Windows Defender
Maps Naps		Sound Recorder	GPUView	S Windows Easy Transfer
Messaging		Steps Recorder	GPUV/ew Help	Windows Eary Transfer Reports
Music		Sticky Notes	Windows Performance	Windows PowerShell
E News		Windows Fax and Scan	Windows Performance	
People		Windows Journal		
Photos		Windows Media Player	Command Prompt	

- 2. Set the "View by" to "Category".
- 3. Click Appearance and Personalization.

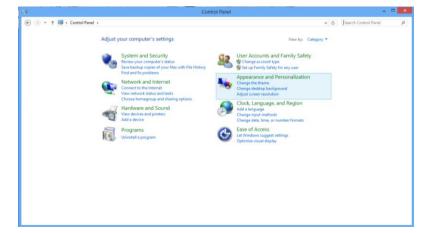

4. Click DISPLAY.

Appearance and Personalization -						
・ ↑ いいしゃ Control Page 100 - 100	anel  > Appearance and Personalization  >	✓ Search Control Panel				
Control Panel Home System and Security Network and Internet	Personalization     Change the theme   Change desktop background       Change the toler of your taskbar and window borders   Change sound effects   Change screen saver					
Hardware and Sound Programs	Display Make text and other items larger or smaller   Adjust screen resolution					
Jser Accounts and Family afety	Taskbar Customize icons on the taskbar					
Appearance and Personalization Clock, Language, and Region	Sase of Access Center Accommodate low vision   Use screen reader   Turn on easy access keys   Turn High Contrast on or off					
ase of Access	Folder Options Specify single- or double-click to open   Show hidden files and folders					
	Fonts Preview, delete, or show and hide fonts   Change Font Settings   Adjust ClearType text					

5. Set the resolution **SLIDE-BAR** to Optimal preset resolution.

el   Appearance and Personalization	Screen Resolution    Display		× 6	- Search Control Panel	ρ
Change the ap	pearance of your display				
	1	Detect			
	1. PLX2780H ~				
Orientations	High 1920 × 1080 (Recommended)	Advanced settings			
		OK Cancel Apply			
	1024 × 768				
	Change the ap	A Appearance and Personalization * Display * Screen Resolution Change the appearance of your display Uniplay: Display: Resolution: Display: Mark tool and other What display series What display series 1920 * 1980 (Recommended) 1920 * 1980 (Recommende	I + Appearance and Personalitation + Daplay + Somen Resultation Change the appearance of your display	I + Appearance and Personalization + Display + Screen Resolution          Change the appearance of your display         Change the appearance of your display         Display:         Display:         Display:         Status         Display:         Status         Make test and other What display server         Status         Status	It + Appearance and Personalization + Dapity + Some Resultation Change the appearance of your display Change the appearance of your display Display: Display

#### Windows 7

For Windows 7:


- 1. Click **START**.
- 2. Click CONTROL PANEL.

Contract Captorer	516
Torent Unit	white same
Walcome Carrier	Destaura
Windows Media Player	Anton
Witchiss Photo Catley	Darren .
Contractive Mesonger Deserted	Smeth
A Windows Mastery Space	Asset have t
Non-Lindow Dates	Computer
Adaba Phataphag CQ	Referance in concerning of
Manelin Interesting	Coverent To
Command Prompt	Const Faret
	Default Programs
<ul> <li>Ali Programo</li> </ul>	They and Support

#### 3. Click **APPEARANCE**.



#### 4. Click **DISPLAY**

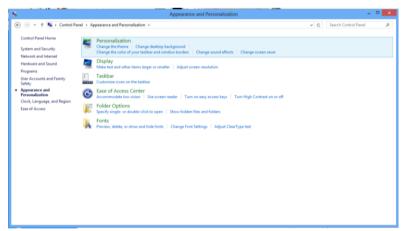

- Screen Resolution
- 5. Set the resolution SLIDE-BAR to Optimal preset resolution.

#### Windows Vista

#### For Windows Vista:

- 1. Click START.
- 2. Click CONTROL PANEL.



#### 3. Click Appearance and Personalization.



#### 4. Click Personalization



#### 5. Click Display Settings.



6. Set the resolution **SLIDE-BAR** to Optimal preset resolution.



#### Windows XP

For Windows XP:


#### 1 Click START.




#### 2 Click SETTINGS.

3 Click CONTROL PANEL.

4 Click Appearance and Themes.

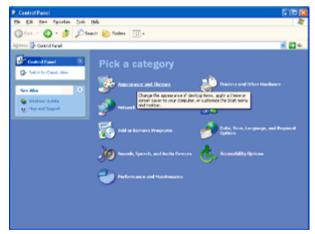

5 Double click **DISPLAY.** 

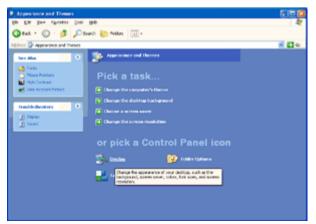

#### 6 Click SETTINGS.

7 Set the resolution **SLIDE-BAR** to Optimal preset resolution.


Display Properties 🛛 😰 🔀						
Themes Deshtop	Screen Saver	Appearance	Sottinge			
Display: Plug and Play Manitor on 3D Prophet III						
Less - 1024 by 7	More	Highest				
		Iroublesh	oot Ad <u>y</u>	anced		
		ок 🗌	Cancel	Αροίν		

#### Windows ME/2000

For Windows ME/2000:

- 1. Click START.
- 2. Click SETTINGS.
- 3. Click CONTROL PANEL.
- 4. Double click **DISPLAY.**
- 5. Click SETTINGS.
- 6. Set the resolution **SLIDE-BAR** to Optimal preset resolution.

## **Hotkeys**

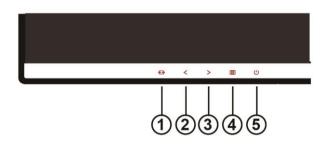

#### I2381F/ I2281FW/ I2481FX

1	Source/Auto/Exit
2	Clear Vision/<
3	Image Ratio />
4	Menu/Enter
5	Power

#### I2281FWH/ I2381FH /I2481FXH

1	Source/Auto/Exit
2	Clear Vision/<
3	Image Ratio/Volume/>
4	Menu/Enter
5	Power

#### Power

Press the Power button to turn on/off the monitor.

#### Menu/Enter

Press to display the OSD or confirm the selection.

#### Volume/>

When there is no OSD, press Volume adjust volume.(HDMI)

#### image ratio / >

When there is no OSD, press > hotkey continuously to change 4:3 or wide image ratio. (If the product screen size is 4:3 or input signal resolution is wide format, the hot key is disable to adjust.) (VGA/DVI)

#### Auto / Exit


When there is no OSD, press Auto / Exit button continuously about 2 second to do auto configure.

#### Source hot key

When the OSD is closed, press Source button will be Source hot key function. Press Source button to select the input source showed in the message bar, press Menu/Enter button to change to the source selected.

#### **Clear Vision**

- 1. When there is no OSD, Press the "<" button to activate Clear Vision.
- Use the "<" or ">" buttons to select between weak, medium, strong, or off settings. Default setting is always "off".

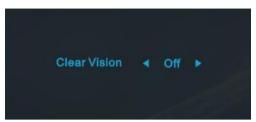

3. Press and hold "<" button for 5 seconds to activate the Clear Vision Demo, and a message of "Clear Vision Demo: on" will be display on the screen for a duration of 5 seconds. Press Menu or Exit button, the message will disappear. Press and hold "<" button for 5 seconds again, Clear Vision Demo will be off.</p>



Clear Vision function provides the best image viewing experience by converting low resolution and blurry images into clear and vivid images.

Clear Vision	Off	
	Weak	Adjust the Clear Vision
	Medium	Aujust the Clear Vision
	Strong	
Clear Vision Demo	on or off	Disable or Enable Demo

## **OSD Setting**

Basic and simple instruction on the control keys.



- 1. Press the **III MENU-button** to activate the OSD window.
- Press < or > to navigate through the functions. Once the desired function is highlighted, press the MENU-button to activate it. If there is a sub-menu, press < or > to navigate through the sub-menu functions.
- 3. Press < or > to change the settings of the selected function. Press AUTO to exit. If you want to adjust any other function, repeat steps 2-3.
- 4. OSD Lock Function: To lock the OSD, press and hold the **MENU-button** while the monitor is off and then press **U** power button to turn the monitor on. To un-lock the OSD press and hold the **MENU-button** while the monitor is off and then press **U** power button to turn the monitor on.

#### Notes:

- 1. If the product has only one signal input, the item of "Input Select" is disabled.
- 2. If the product screen size is 4:3 or input signal resolution is native resolution, the item of "Image Ratio" is disabled.
- 3. One of Clear vision, DCR, Color Boost, and Picture Boost functions is activated; the other three functions are turned off accordingly.
- 4. Overdrive feature only applies to I2481FXH.


#### Luminance

Cuminance	Image Setup	Color Setup	Picture Boost	OSD Setup	Extra
Contrast Brightness Eco mode	50 50 4 Standard ►	Gamma DCR OverDrive	4 Gamma 1 4 Off 4 Medium		
	and the second	·			

1. Press **IIII MENU** (Menu) to display menu.



2. Press < or > to select (Luminance), and press **MENU** to enter.

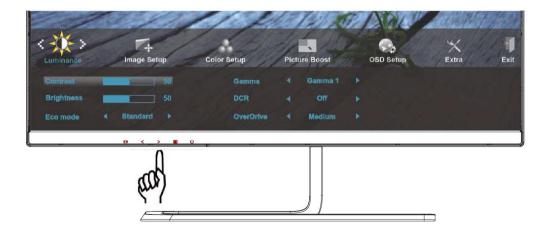

3. Press  $\leq$  or > to select submenu.



4. Press  $\leq$  or > to adjust.



5. Press **AUTO** to exit.

	Contrast	0-100		Contrast from Digital-register.
	Brightness	0-100		Backlight Adjustment
		Standard	>	Standard Mode
		Text	T	Text Mode
1200	Eco mode	Internet	E	Internet Mode
-0-		Game		Game Mode
100		Movie	Ø	Movie Mode
		Sports	R	Sports Mode
		Gamma1		Adjust to Gamma 1
		Gamma2		Adjust to Gamma 2
		Gamma3		Adjust to Gamma 3
	DCR	Off		Disable dynamic contrast ratio

		On	DCR	Enable dynamic contrast ratio
		Weak		
	OverDrive	Medium		Adjust the response time (12491EVH)
		Strong		Adjust the response time (I2481FXH)
		Off		


## Image Setup

¢ () Luminance	Image Setup	Color Setup	Picto	ure Boost	OSD Setup	× Extra Ex
Contrast Brightness Eco mode	50 50 Standard	Gamma DCR OverDrive		Gamma 1 Off Medlum		
	and the second	пр				

1. Press **MENU** (Menu) to display menu.

	2/1/	1/1	12/2/17	TE AN	e det	7117
Image Setup	Color Setup	Picture Boost	OSD Setup	Extra	Exit	
Clock	50	H.Position				
Phase	50	V.Position				
Sharpness	50					
	<u>⇔ &lt; _&gt; ∎ (</u>	)				
	A					
	(DD)					
	57					
	E					

2. Press < or > to select (Image Setup), and press **MENU** to enter.

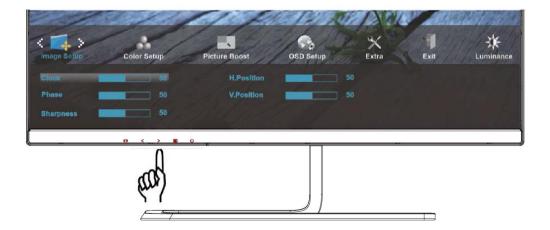

3. Press  $\leq$  or > to select submenu.

( ) Image Setup	Color Setup	Picture Boost	OSD Setup	× Extra	Fil Exit	Luminance
Clock	50	H.Position				
Phase Sharpness	50	V.Position				
	<u> </u>	х <mark>8</mark> х эх				
	and					

4. Press  $\leq$  or > to adjust.

( ) Image Setup	Color Setup	Picture Boost	OSD Setup	× Extra	exit	Luminance
Clock   Phase   Sharpness	50 50 50 50	H.Position V.Position	-			
	and <u></u>					

5. Press • AUTO to exit.

	Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
Phase		0-100	Adjust Picture Phase to reduce Horizontal-Line noise.
	Sharpness	0-100	Adjust picture sharpness.
	H.Position	0-100	Adjust the horizontal position of the picture.
	V.Position	0-100	Adjust the vertical position of the picture.

### **Color Setup**



1. Press **IIII MENU** (Menu) to display menu.



2. Press  $\lt$  or > to select  $\checkmark$  (Color Setup), and press **MENU** to enter.



3. Press  $\leq$  or > to select submenu.



4. Press  $\leq$  or > to adjust.



5. Press • AUTO to exit.


	Warm		Recall Warm Color Temperature from EEPROM.
	Normal		Recall Normal Color Temperature from EEPROM.
	Cool		Recall Cool Color Temperature from EEPROM.
Color Temp.	sRGB		Recall SRGB Color Temperature from EEPROM.
		Red	Red gain from Digital-register.
	User	Green	Green gain from Digital-register.
		Blue	Blue gain from Digital-register.
	Full Enhance	ON/OFF	Disable or Enable Full Enhance Mode.
	Nature Skin	ON/OFF	Disable or Enable Nature Skin Mode.
DCB Mode	Green Field	ON/OFF	Disable or Enable Green Field Mode.
	Sky-blue	ON/OFF	Disable or Enable Sky-blue Mode.
	AutoDetect	ON/OFF	Disable or Enable AutoDetect Mode.

DCB Demo	ON/OFF	Disable or Enable Demo.

#### **Picture Boost**



1. Press III MENU (Menu) to display menu.

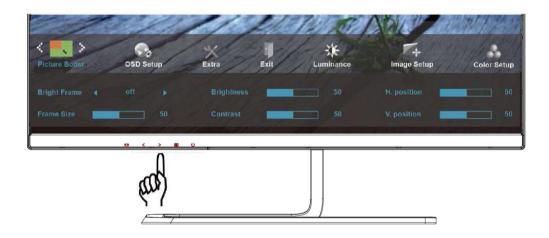

2. Press < or > to select (Picture Boost), and press **MENU** to enter.



3. Press < or > to select submenu.

Contraction of the second seco	OSD Setup	Extra Exit	ین Luminance	F‡ Image Setup	Color Setup
Bright Frame 4	otf >	Brightness Contrast	50	H. position 🗾	50
	<u> </u>	0			
	(alla)				

4. Press  $\leq$  or > to adjust.



5. Press • AUTO to exit.

Bright Frame	ON/OFF	Enable/Disable Bright Frame
Frame Size	14-100	Adjust the Size of the Frame
Brightness	0-100	Brightness Adjustment for Enhance Area
Contrast	0-100	Contrast Adjustment for Enhance Area
H. position	0-100	Adjust the horizontal position of the Frame
V. position	0-100	Adjust the vertical position of the Frame

## OSD Setup

<	Image Setu		olor Setup	Picte	Ire Boost	2/) o:	SD Setup	× Extra	Exit
Contrast Brightness Eco mode		50 50	Gamma DCR OverDrive		Gamma 1 Off Medlum				
	• • • •	h							

1. Press **IIII MENU** (Menu) to display menu.



2. Press  $\lt$  or  $\gt$  to select (OSD Setup), and press **MENU** to enter.



3. Press < or > to select submenu.



4. Press  $\leq$  or > to adjust.



5. Press **AUTO** to exit.

Language		Select the OSD language
Timeout	5-120	Adjust the OSD timeout.
H. Position 0-100		Adjust the horizontal position of the OSD.
V. Position	0-100	Adjust the vertical position of the OSD.
Transparence	0-100	Adjust the OSD
Break Reminder	ON/OFF	Break Reminder if the user continuely work for mare than 1 hurs

#### Extra

Cuminance		Image Set	up	Color	Setup	Pict	Ire Boost	OSD Setup	Extra	Exit
Contrast Brightness Eco mode	-	Standard	50 50		Gamma DCR OverDrive		Gamma 1 Off Medium			
		• <	and fair	С						

1. Press **IIII** MENU (Menu) to display menu.

< X > Extra	Exit	Luminance	Image Se	tup	Color	Setup	Picture Boost	OSD Setup
Input Select			Image Ratio					
Auto Config			DDC-CI					
Off timer					NO			
		d						

2. Press < or > to select  $\checkmark$  (Extra), and press **MENU** to enter.



3. Press  $\leq$  or > to select submenu.

Extra		Exit	Luminance	Image Set	qu	Color	Setup	Picture Boost OSD Setup
Input Select	3	DVI	E.	Image Ratio				
Off timer								V. Frequency: 60Hz
an e	_	<del></del>						
		d						

4. Press  $\leq$  or > to adjust.




5. Press **AUTO** to exit.

		Auto / D-SUB / DVI	Select input signal source. (I2281FW、 I2381F、I2481FX)			
	Input Select	Auto / D-SUB / HDMI	Select input signal source.( I2281FWH、 I2381FH)			
		Auto / D-SUB / HDMI1/ HDMI2	Select input signal source.(I2481FXH)			
21	Auto Config.	Yes / No	Auto adjust.the picture to default.			
	Off Timer	0-24 hrs	Select DC off time.			
· ·	Image Ratio	wide or 4:3	Select wide or 4:3 format for display.			
	DDC/CI	Yes / No	Turn on or off DDC/CI Support.			
	Reset	Yes / No	Reset the menu to default.			
	Information		Show the information of the main image and sub-image source.			

## Exit

Cuminance	T+ Image Setup	Color Setup	Pictu	Ire Boost	OSD Setup	Extra
Contrast Brightness Eco mode	50 50 Standard •	Gamma DCR OverDrive		Gamma 1 Off Medium		
	and .					

1. Press III MENU (Menu) to display menu.

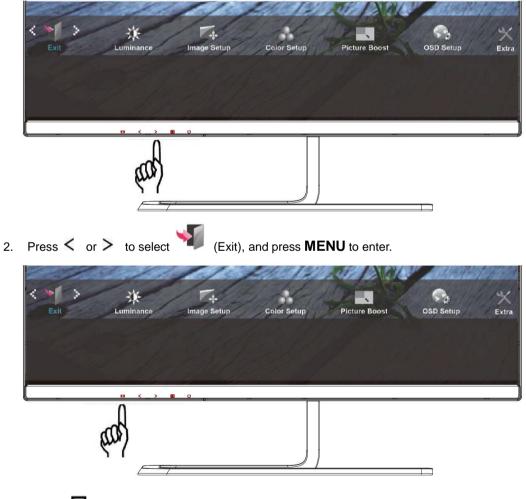

3. Press • AUTO to exit.

*	Exit		Exit the main OSD
---	------	--	-------------------

## **LED Indicator**

Status	LED Color
Full Power Mode	White
Power Saving	Orange

# Driver

## **Monitor Driver**

### Windows 8

- 1. Start Windows® 8
- 2. Right click and click **All apps** at the bottom-right of the screen.



- 3. Click on the "Control panel" icon
- 4. Set the "View by" to "Large icons" or "Small icons".

					All Control Panel	Items					- 0	×
) @	) - 🕆 🥞 + Control Panel +	All Control I	Panel Items						v 6	Search	n Control Panel	ş
djus	t your computer's settings									View by	Large icoss *	
p.	Action Center		Administrative Tools		AutoPlay		BitLocker Drive Encryption	<u>.</u>	Color Management		Large icons     Small icons	
G	Credential Manager	ď	Date and Time		Default Programs	à	Device Manager	-	Devices and Printers			
2	Display	C	Ease of Access Center	<b>3</b>	Family Safety	6	File History	۶	Flash Player (32-bit)			
E	Folder Options	A	Fonts	•3	HomeGroup	R	Indexing Options	e	Internet Options			
•	Keyboard	A.	Language		Location Settings	I	Mouse	-	Network and Sharing Center			
	Notification Area Icons		NVIDIA Control Panel		Performance Information and Tools	-	Personalization	3	Phone and Modem			
8	Power Options	闻	Programs and Features	R	Recovery	8	Region	-	RemoteApp and Deskt Connections	op		
0	Sound	Ą	Speech Recognition	Ē	Storage Spaces	۲	Sync Center	4	System			
1	Taskbar		Troubleshooting	82	User Accounts	1	Windows 7 File Recovery	龃	Windows Defender			
2	Windows Firewall	-	Windows Update									



11:16 PM 12/25/2012 5. Click on the "**Display**" icon.

Action Center	C Administrative Tools	AutoPlay	Backup and Restore	
Color Management	Credential Manager	💕 Date and Time	Default Programs	
Desktop Gadgets	Jevice Manager	and Devices and Printers	Display	
Ease of Access Center	E Folder Options	Fonts	Getting Started	
	A Indexing Options	1 Internet Options	<ul> <li>Keyboard</li> </ul>	
S Location and Other Sensors	J Mouse	Stewark and Sharing Center	E Notification Area Icons	
NVIDIA Control Panel	NVIDIA PhysiX	🍓 Parental Controls	/ Pen and Touch	
Performance Information and Tools	Personalization	Phone and Modern	Power Options	
Programs and Features	Realtek HD Audio Manager	🛋 Recovery	Region and Language	
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting	
User Accounts	🍇 Windows Anytime Upgrade	Windows CardSpace	Windows Defender	
Windows Firewall	Twindows Update			

6. Click on the **"Change display settings"** button.

🕥 - 🤍 • Control Panel	All Control Panel Items      Display		Search Cantrol Panel	
Control Panel Home Adjust resolution	Make it easier to read what's or You can change the size of text and othe temporarily enlarge just part of the scree	items on your screen by choosing one of these options. To		
Calibrate color Change display settings	Smaller - 100%	Preview		
Adjust ClearType text Set custom text size (DPI)	Medium - 125% (default)			
	🙁 Larger - 150%			
		Apply		
See also				
Personalization Devices and Printers				

7. Click the "Advanced Settings" button.

			-
Color Control Panel + All Control Panel Items + Di		• Search Control Panel	P
Chang	Lividia Default Flat Panel •		
Resoluti Oriental	rx 1920 = 1080 (recommended) • rx Landscape • &dranced settings		
	and other items larger or smaller lay settings should I choose? OK. Cancel Apply		

8. Click the **"Monitor"** tab and then click the **"Properties"** button.

eneric PnP Monitor and NVIDIA GeForce 9100M G Properties	×
Adapter Monitor Troubleshoot Color Management @ GeForc	010011.0
Adapter Monitor Troubleshoot Color Management @ GeForce	8 9 100M G
Monitor Type	
Generic PnP Monitor	
8	
🕞 Prope	rties
Monitor Settings	
Screen refresh rate:	
Screen retresh rate:	
60 Hertz	-
Hide modes that this monitor cannot display	
Clearing this check box allows you to select display modes that th	
cannot display correctly. This may lead to an unusable display an damaged hardware.	d/or
damaged nardware.	
Colors:	
True Color (32 bit) 🔹	
OK Cancel	Apply

9. Click the "Driver" tab.

General Driver Details				
Generic PnP Mo	nitor			
Driver Provider.	Microsoft			
Driver Date:	6/21/2006			
Driver Version:	6.1.7600.16385			
Digital Signer:	Microsoft Windows			
Driver Details	To view details about the driver files. To update the driver software for this device.			
Update Driver				
Roll Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.			
Disable	Disables the selected device.			
Uninstall	To uninstall the driver (Advanced).			
	OK Cancel			

10. Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver..." and then click the "Browse my computer for driver software" button.

•	Search automatically for updated driver software Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.
•	Browse my computer for driver software Locate and install driver software manually.

11. Select "Let me pick from a list of device drivers on my computer".



12. Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

Install From	the manufacturer and model of your hardware device an n Disk	d then click Nex
9	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
	Copy manufacturer's files from:	
	F:\Drivers\e936Vw	Browse


- 13. Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- 14. Select your monitor model and click the "**Next**" button. The files will be copied from the CD to your hard disk drive.
- 15. Close all open windows and remove the CD.
- 16. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

### Windows 7


- 1. Start Windows® 7
- 2. Click on the 'Start' button and then click on 'Control Panel'.



3. Click on the "Display" icon.

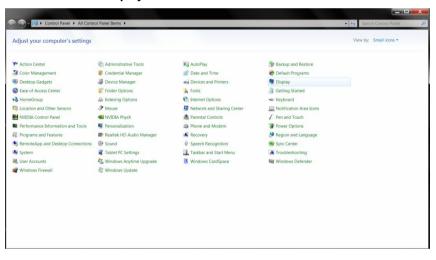

4. Click on the "Change display settings" button.

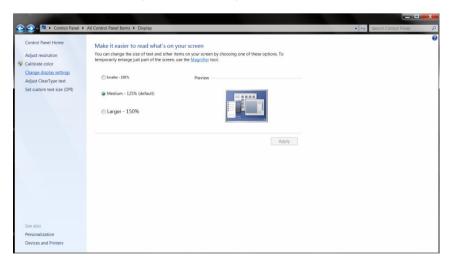


5. Click the "Advanced Settings" button.

📀 🌍 - 🔍 > Control Panel > All Control Panel	Rems + Display + Screen Resolution	Search Control Panel
	Change the appearance of your display	
	Display:           1. Revolution:       1920 × 1080 (recommended)         Resolution:       1920 × 1080 (recommended)         Orientation:       Landscape         Advanced settings         Make text and other items larger or smaller         Wast display settings should 1 choose?	
	OK Cancel Apply	


6. Click the "Monitor" tab and then click the "Properties" button.

apter		Troublesh	oot Color I	Managemer	t 🚳 GeFord	e 9100M G
Monito	or Type					
-	Gene	ric PnP Mon	litor			
					🚽 😚 Prope	erties
Monito	or Settings	s				
Scree	n refresh	rate:				
60 H	ertz					-
Close						
canno		correctly. T			y modes that th able display a	
canno	ıt display ged hard	correctly. T				
canno deme	ıt display ged hard	correctly. T iware.				
canno deme	ıt display ged hard s:	correctly. T iware.				
canno dama	ıt display ged hard s:	correctly. T iware.				
canno dama	ıt display ged hard s:	correctly. T iware.				


7. Click the "Driver" tab.

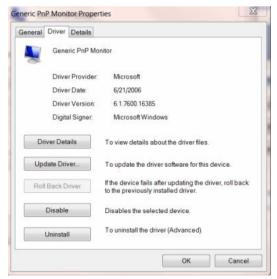

8. Open the **"Update Driver Software-Generic PnP Monitor"** window by clicking on **"Update Driver...**" and then click the **"Browse my computer for driver software"** button.

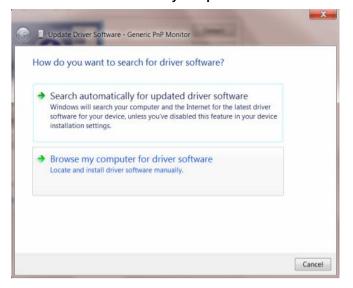

9. Select "Let me pick from a list of device drivers on my computer".

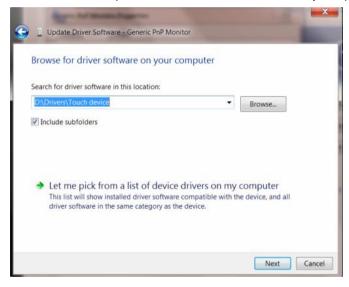

10. Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

Install Fre	t the manufacturer and model of your hardware device an om Disk	d then click Next I
-	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
1	Copy manufacturer's files from:	
	F:\Drivers\e936Vw	Browse

- 11. Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- 12. Select your monitor model and click the "**Next**" button. The files will be copied from the CD to your hard disk drive.
- 13. Close all open windows and remove the CD.
- 14. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

### Windows Vista

1. Click "Start" and "Control Panel". Then, double-click on "Appearance and Personalization".



2. Click "Personalization" and then "Display Settings".




3. Click "Advanced Settings...".



4. Click **"Properties"** in the **"Monitor"** tab. If the **"Properties"** button is deactivated, it means the configuration for your monitor is completed. The monitor can be used as is.

If the message "Windows needs..." is displayed, as shown in the figure below, click "Continue".

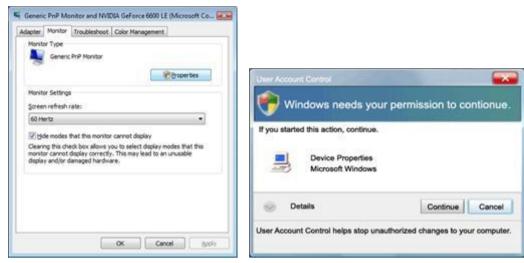

5. Click "Update Driver..." in the "Driver" tab.

eneric PnP Monitor Properties	Generic PnP Monitor Properties
General Dever Details	General Driver Details
Senetic FivP Monitor	Generic PriP Monitor
Device type: Montons Manufacturer: (Standard montor types) Location: en WVIDIA GeForce 5600 LE (Microsoft Corpo Device status	Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6:0.6000.16386 Digital Signer: microsoft windows
This device is working property.	Dryver Details         To veew details about the driver files.           Update Driver         To update the driver software for this device.           Boll Back Chriser         P the device fails after update of the driver, rolt back to the previously matched driver.           Deable         Deables the selected driver.
OK Center	Uninstal To uninstal the driver (Advanced)

6. Check the "Browse my computer for driver software" checkbox and click "Let me pick from a list of device drivers on my computer".



- Click on the "Have disk..." button, then click on the "Browse..." button and then select the appropriate drive F:\Driver (CD-ROM Drive).
- 8. Select your monitor model and click on the "Next" button.
- 9. Click "Close"  $\rightarrow$  "Close"  $\rightarrow$  "OK"  $\rightarrow$  "OK" on the following screens displayed in sequence.

### Windows XP

1. Start Windows® XP


2. Click on the 'Start' button and then click on 'Control Panel'.



3. Select and click on the category 'Appearance and Themes'



4. Click on the 'Display' Item.

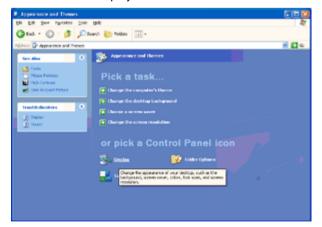

5. Select the 'Settings' tab then click on the 'Advanced' button.

isplay Propertie	5	2
Themes Desktop	Screen Saver Appearance Settin	ge
Display:	Apr on 30 Prophet III	
- Screen resolution		
Less -	More Highest (32 bit)	~
1024 by 7	CO pixolo	
	Iroubleshoot	Advanced
	OK Cance	Apply

- 6. Select 'Monitor' tab
- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.
- If the 'Properties' button is active, click on 'Properties' button.

Please follow the steps below.

ig and Play Monito	r and 3D Prop	het III Pro	perties	7
GeForce3	Selec	tion	Color Cor	rection
General Adapter	Monitor Tro	oubleshoot	Color Mana	gement
Monitor type Plug and Pla	y Monitor		Properties	
Monitor settings				=
Screen refresh rate:				
60 Hertz			1	~
monitor cannot displa and/or damaged har		ay lead to an	unusable disp	olay


7. Click on the 'Driver' tab and then click on 'Update Driver...' button.

Plug and Play Monitor Properties	
General Driver	Plug and Play Monitor Properties
Plug and Play Monitor	Genetal Driver
Device type: Monitors	Plug and Play Monitor
Manufacturer: (Standard monitor types)	Driver Provider: Microsoft
Location: on 3D Prophet III	Driver Date: 6/6/2001
C Device status	Driver Version: 5.1.2001.0
This device is working properly.	Digital Signer: Microsoft Windows XP Publisher
If you are having problems with this device, click. Troubleshoot to start the troubleshooter.	Driver Details To view details about the driver files.
	Ugdate Driver To update the driver for this device.
Iroubleshoot	Boll Back Driver If the device fails after updating the driver, roll back to the previously installed driver.
Device usage: Use this device (enable)	Uninstall To uninstall the driver (Advanced).
OK Cancel	OK Cancel


8. Select the 'Install from a list or specific location [advanced]' radio button and then click on the 'Next' button.



9. Select the 'Don't Search. I will choose the driver to install' radio button. Then click on the 'Next' button.

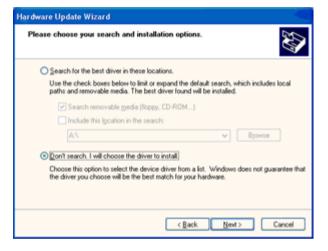

10. Click on the 'Have disk...' button, then click on the 'Browse...' button and then select the appropriate drive F: (CD-ROM Drive).

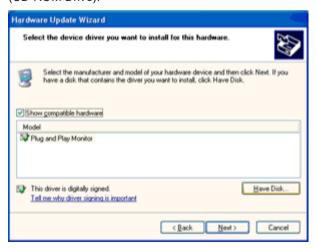

11. Click on the 'Open' button, then click the 'OK' button.

12. Select your monitor model and click on the 'Next' button.

- If you can see the 'has not passed Windows® Logo testing to verify its compatibility with Windows® XP' message, please click on the 'Continue Anyway' button.

13. Click on the 'Finish' button then the 'Close' button.

14. Click on the 'OK' button and then the 'OK' button again to close the Display Properties dialog box.

### Windows 2000

- 1. Start Windows® 2000.
- 2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
- 3. Double click on the **'Display'** Icon.
- 4. Select the 'Settings' tab then click on 'Advanced...'.
- 5. Select 'Monitor'
  - If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.
  - If the 'Properties' button is active. Click on 'Properties' button. Please follow the steps given below.
- 6. Click on 'Driver' and then click on 'Update Driver...' then click on the 'Next' button.
- 7. Select 'Display a list of the known drivers for this device so that I can choose a specific driver', then click on 'Next' and then click on 'Have disk...'.
- 8. Click on the 'Browse...' button then select the appropriate drive F: (CD-ROM Drive).
- 9. Click on the 'Open' button, then click on the 'OK' button.
- 10. Select your monitor model and click on the 'Next' button.
- 11. Click on the 'Finish' button then the 'Close' button.

If you can see the 'Digital Signature Not Found' window, click on the 'Yes' button.

### Windows ME

- 1. Start Windows® Me
- 2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
- 3. Double click on the 'Display' Icon.
- 4. Select the 'Settings' tab then click on 'Advanced...'.
- 5. Select the 'Monitor' button, then click on 'Change...' button.
- 6. Select 'Specify the location of the driver (Advanced)' and click on the 'Next' button.
- 7. Select 'Display a list of all the drivers in a specific location, so you can choose the driver you want', then click on 'Next' and then click on 'Have Disk...'.
- 8. Click on the 'Browse...' button, select the appropriate drive F: (CD-ROM Drive) then click on the 'OK' button.
- 9. Click on the 'OK' button, select your monitor model and click on the 'Next' button.
- 10. Click on 'Finish' button then the 'Close' button.

## i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide. The software Supported operating systems: Windows 8, Windows 7, Windows Vista, Windows XP.



## e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC statuses, you may choose the desired time (in minutes) from the pull-down menu for your monitor to automatically shutdown. The example below illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.




You can click "RESET" to set the e-Saver to its default settings like below.



## Screen+



Welcome to "Screen+" software by AOC. Screen+ software is a desktop screen splitting tool; it splits the desktop into different panels, and each panel displays a different window. You only need to drag the window to a corresponding panel when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it. The software Supported operating systems: Windows 8, Windows 7, Windows Vista, Windows XP.

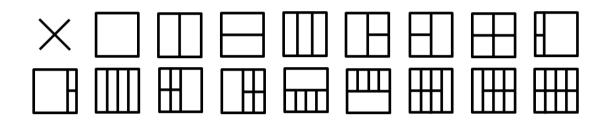

# Troubleshoot

Problem & Question	Possible Solutions		
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.		
No images on the screen	<ul> <li>Is the power cord connected properly? Check the power cord connection and power supply.</li> <li>Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection.</li> <li>* DVI input is not available on every model. (Connected using the HDMI cable) Check the HDMI cable connection.</li> <li>* DVI input is not available on every model.</li> <li>(Connected using the HDMI cable) Check the HDMI cable connection.</li> <li>* HDMI input is not available on every model.</li> <li>If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen. If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/2000) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.</li> <li>Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Adjust the maximum resolution and frequency that the monitor can handle properly.</li> <li>Make sure the AOC Monitor Drivers are installed.</li> </ul>		
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back.		
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution you are using.		

Monitor Is Stuck In Active Off-Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.	
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.	
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).	
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.	
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME shut-down mode to adjust CLOCK and PHASE. Press to auto-adjust.	

# **Specification**

## General Specification (I2481FX)

	Model name	I2481FX		
	Driving system	TFT Color LCD		
Panel	Viewable Image Size	60.47cm diagonal		
	Pixel pitch	0.2745(H)mm x 0.2745(V)mm		
	Video	R, G, B Analog Interface & Digital Interface		
	Separate Sync.	H/V TTL		
	Display Color	16.7M Colors		
	Pixel Clock	170 MHz		
	Horizontal scan range	30~83KHz		
	Horizontal scan Size(Maximum)	527.04mm		
	Vertical scan range	50Hz ~ 76Hz		
	Vertical scan Size(Maximum)	296.46mm		
	Optimal preset resolution	1920×1080@60Hz		
Others	Plug & Play	VESA DDC2B/CI		
Others	Input Connector	VGA/ DVI		
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive, TMDS		
	Power Source	19VDC, 1.31A		
		Typical (Brightness = 90,Contrast = 50)	22W	
	Power Consumption	(Brightness = 100,Contrast = 100)	25W	
		Power saving	≤0.5W	
	Off timer	0-24 hrs		
	Temperature:			
	Operating	0° to 40°C		
	Non-Operating	-20° to 60°C		
	Humidity:			
Environmental	Operating	20% to 90% (non-condensing)		
	Non-Operating	15% to 90% (non-condensing)		
	Altitude:			
	Operating	0~ 5000m(0~ 16404 ft)		
	Non-Operating	0~ 12192m (0~ 40000 ft )		

# General Specification (I2481FXH)

	Model name	I2481FXH		
Panel	Driving system	TFT Color LCD		
	Viewable Image Size	60.47cm diagonal		
	Pixel pitch	0.2745(H)mm x 0.2745(V)mm		
	Video	R, G, B Analog Interface & HDMI Interface		
	Separate Sync.	H/V TTL		
	Display Color	16.7M Colors		
	Pixel Clock	170 MHz		
	Horizontal scan range	30~83KHz		
	Horizontal scan Size(Maximum)	527.04mm		
	Vertical scan range	50Hz ~ 76Hz		
	Vertical scan Size(Maximum)	296.46mm		
	Optimal preset resolution	1920×1080@60Hz		
0.1	Plug & Play	VESA DDC2B/CI		
Others	Input Connector	VGA/ 2*HDMI		
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive, TMDS		
	Power Source	19VDC, 1.31A		
		Typical (Brightness = 90,Contrast = 50)	22W	
	Power Consumption	(Brightness = 100,Contrast = 100)	25W	
		Power saving	≤0.5W	
	Off timer	0-24 hrs		
	Temperature:			
	Operating	0° to 40°C		
	Non-Operating	-20° to 60°C		
	Humidity:			
Environmental	Operating	20% to 90% (non-condensing)		
	Non-Operating	15% to 90% (non-condensing)		
	Altitude:			
	Operating	0~ 5000m(0~ 16404 ft)		
	Non-Operating	0~ 12192m (0~ 40000 ft )		

# General Specification (I2281FW)

	Model name	I2281FW		
	Driving system	TFT Color LCD		
Panel	Viewable Image Size	54.6cm diagonal		
	Pixel pitch	0.24795(H)mm x 0.24795(V)mm		
	Video	R, G, B Analog Interface & Digital Interface		
	Separate Sync.	H/V TTL		
	Display Color	16.7M Colors		
	Pixel Clock	170 MHz		
	Horizontal scan range	30~83KHz		
	Horizontal scan Size(Maximum)	476.064 mm		
	Vertical scan range	50Hz $^{\sim}$ 76Hz		
	Vertical scan Size(Maximum)	267.786 mm		
	Optimal preset resolution	1920×1080@60Hz		
0.1	Plug & Play	VESA DDC2B/CI		
Others	Input Connector	VGA/ DVI		
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive, TMDS		
	Power Source	19VDC, 1.31A		
		Typical (Brightness = 90,Contrast = 50)	22W	
	Power Consumption	(Brightness = 100,Contrast = 100)	25W	
		Power saving	≤0.5W	
	Off timer	0-24 hrs		
	Temperature:			
	Operating	0° to 40°C		
	Non-Operating	-20° to 60°C		
	Humidity:			
Environmental	Operating	20% to 90% (non-condensing)		
	Non-Operating	15% to 90% (non-condensing)		
	Altitude:			
	Operating	0~ 5000m(0~ 16404 ft)		
	Non-Operating	0~ 12192m (0~ 40000 ft )		

# General Specification (I2281FWH)

	Model name	I2281FWH		
Panel	Driving system	TFT Color LCD		
	Viewable Image Size	54.6cm diagonal		
	Pixel pitch	0.24795(H)mm x 0.24795(V)mm		
	Video	R, G, B Analog Interface & HDMI Interface		
	Separate Sync.	H/V TTL		
	Display Color	16.7M Colors		
	Pixel Clock	170 MHz		
	Horizontal scan range	30~83KHz		
	Horizontal scan Size(Maximum)	476.064 mm		
	Vertical scan range	50Hz ~ 76Hz		
	Vertical scan Size(Maximum)	267.786 mm		
	Optimal preset resolution	1920×1080@60Hz		
0.1	Plug & Play	VESA DDC2B/CI		
Others	Input Connector	VGA/ HDMI		
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive, TMDS		
	Power Source	19VDC, 1.31A		
		Typical (Brightness = 90,Contrast = 50)	22W	
	Power Consumption	(Brightness = 100,Contrast = 100)	25W	
		Power saving	≤0.5W	
	Off timer	0-24 hrs		
	Temperature:			
	Operating	0° to 40°C		
	Non-Operating	-20° to 60°C		
	Humidity:			
Environmental	Operating	20% to 90% (non-condensing)		
	Non-Operating	15% to 90% (non-condensing)		
	Altitude:			
	Operating	0~ 5000m(0~ 16404 ft)		
	Non-Operating	0~ 12192m (0~ 40000 ft )		

# General Specification (I2381F)

	Model name	I2381F		
Panel	Driving system	TFT Color LCD		
	Viewable Image Size	58.42cm diagonal		
	Pixel pitch	0.2652(H)mm x 0.2652(V)mm		
	Video	R, G, B Analog Interface & Digital Interface		
	Separate Sync.	H/V TTL		
	Display Color	16.7M Colors		
	Pixel Clock	170 MHz		
	Horizontal scan range	30~83KHz		
	Horizontal scan Size(Maximum)	509.184 mm		
	Vertical scan range	50Hz $^{\sim}$ 76Hz		
	Vertical scan Size(Maximum)	286.416 mm		
	Optimal preset resolution	1920×1080@60Hz		
0.1	Plug & Play	VESA DDC2B/CI		
Others	Input Connector	VGA/ DVI		
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive, TMDS		
	Power Source	19VDC, 1.84A		
		Typical (Brightness = 90,Contrast = 50)	28W	
	Power Consumption	(Brightness = 100,Contrast = 100)	35W	
		Power saving	≤0.5W	
	Off timer	0-24 hrs		
	Temperature:			
	Operating	0° to 40°C		
	Non-Operating	-20° to 60°C		
	Humidity:			
Environmental	Operating	20% to 90% (non-condensing)		
	Non-Operating	15% to 90% (non-condensing)		
	Altitude:			
	Operating	0~ 5000m(0~ 16404 ft)		
	Non-Operating	0~ 12192m (0~ 40000 ft )		

# General Specification (I2381FH)

	Model name	I2381FH			
Panel	Driving system	TFT Color LCD			
	Viewable Image Size	58.42cm diagonal			
	Pixel pitch	0.2652(H)mm x 0.2652(V)mm			
	Video	R, G, B Analog Interface & HDMI Interface			
	Separate Sync.	H/V TTL			
	Display Color	16.7M Colors			
	Pixel Clock	170 MHz			
	Horizontal scan range	30~83KHz			
	Horizontal scan Size(Maximum)	509.184 mm			
	Vertical scan range	50Hz ~ 76Hz			
	Vertical scan Size(Maximum)	286.416 mm			
	Optimal preset resolution	1920×1080@60Hz			
Others	Plug & Play	VESA DDC2B/CI			
Others	Input Connector	VGA/ HDMI			
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive, TMDS			
	Power Source	19VDC, 1.84A			
		Typical (Brightness = 90,Contrast = 50)	28W		
	Power Consumption	(Brightness = 100,Contrast = 100)	35W		
		Power saving	≤0.5W		
	Off timer	0-24 hrs			
	Temperature:				
	Operating	0° to 40°C			
	Non-Operating	-20° to 60°C			
	Humidity:				
Environmental	Operating	20% to 90% (non-condensing)			
	Non-Operating	15% to 90% (non-condensing)			
	Altitude:				
	Operating	0~ 5000m(0~ 16404 ft)			
	Non-Operating	0~ 12192m (0~ 40000 ft )			

# Preset Display Modes (I2281FW/I2381F/I2481FX)

Standard	Resolution	H. Frequency (kHz)	V. Frequency (Hz)
VGA	640x480@60Hz	31.469	59.940
VGA	640x480@67Hz	35.000	66.667
VGA	640x480@72Hz	37.861	72.809
VGA	640x480@75Hz	37.500	75.000
Dos-mode	720x400@70Hz	31.469	70.087
SVGA	800x600@56Hz	35.156	56.250
SVGA	800x600@60Hz	37.879	60.317
SVGA	800x600@72Hz	48.077	72.188
SVGA	800x600@75Hz	46.875	75.000
SVGA	832x624@75Hz	49.725	74.551
XGA	1024x768@60Hz	48.363	60.004
XGA	1024x768@70Hz	56.476	70.069
XGA	1024x768@75Hz	60.023	75.029
XGA	1024x768@75Hz	60.241	74.927
***	1280x960@60Hz	60.000	60.000
SXGA	1280x1024@60Hz	63.981	60.020
SXGA	1280x1024@75Hz	79.976	75.025
WXGA+	1440x900@60Hz	55.935	59.887
WSXGA	1680x1050@60Hz	65.290	59.954
FHD	1920x1080@60Hz	67.500	60.000


# Preset Display Modes (I2281FWH/I2381FH/I2481FXH)

Standard	Resolution	H. Frequency (kHz)	V. Frequency (Hz)
VGA	640x480@60Hz	31.469	59.940
VGA	640x480@67Hz	35.000	66.667
VGA	640x480@72Hz	37.861	72.809
VGA	640x480@75Hz	37.500	75.000
Dos-mode	720x400@70Hz	31.469	70.087
SVGA	800x600@56Hz	35.156	56.250
SVGA	800x600@60Hz	37.879	60.317
SVGA	800x600@72Hz	48.077	72.188
SVGA	800x600@75Hz	46.875	75.000
SVGA	832x624@75Hz	49.725	74.551
XGA	1024x768@60Hz	48.363	60.004
XGA	1024x768@70Hz	56.476	70.069
XGA	1024x768@75Hz	60.023	75.029
XGA	1024x768@75Hz	60.241	74.927
***	1280x960@60Hz	60.000	60.000
SXGA	1280x1024@60Hz	63.981	60.020
SXGA	1280x1024@75Hz	79.976	75.025
WXGA+	1440x900@60Hz	55.935	59.887
WSXGA	1680x1050@60Hz	65.290	59.954
FHD	1920x1080@60Hz	67.500	60.000

#### HDMI


Format	Resolution	Vertical frequency
480p	640x480	60Hz
480p	720x480	60Hz
576p	720x576	50Hz
720р	1280x720	50Hz,60Hz
1080p	1920x1080	50Hz,60Hz

## **Pin Assignments**

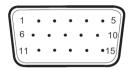


### 15-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	Video-Red	9	+5V
2	Video-Green	10	Ground
3	Video-Blue	11	N.C.
4	N.C.	12	DDC-Serial data
5	Detect Cable	13	H-sync
6	GND-R	14	V-sync
7	GND-G	15	DDC-Serial clock
8	GND-B		

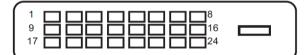

24-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS data 2-	13	TMDS data 3+/N.C.
2	TMDS data 2+	14	+5V Power
3	TMDS data 2/4 Shield	15	Ground (for+5V)
4	TMDS data 4-/N.C.	16	Hot Plug Detect
5	TMDS data 4+/N.C.	17	TMDS data 0-
6	DDC Clock	18	TMDS data 0+
7	DDC Data	19	TMDS data 0/5 Shield
8	N.C.	20	TMDS data 5-/N.C.
9	TMDS data 1-	21	TMDS data 5+/N.C.
10	TMDS data 1+	22	TMDS Clock Shield
11	TMDS data 1/3 Shield	23	TMDS Clock +
12	TMDS data 3-/N.C.	24	TMDS Clock —

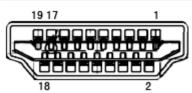

### 19-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2+	11	TMDS Clock Shield
2	TMDS Data 2 Shield	12	TMDS Clock
3	TMDS Data 2	13	CEC
4	TMDS Data 1+	14	Reserved (N.C. on device
5	TMDS Data 1Shield	15	SCL
6	TMDS Data 1	16	SDA
7	TMDS Data 0+	17	DDC/CEC Ground
8	TMDS Data 0 Shield	18	+5V Power
9	TMDS Data 0	19	Hot Plug Detect
10	TMDS Clock +		

## **Plug and Play**

### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

# Regulation

## **FCC Notice**

#### FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

#### NOTICE:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

## **WEEE Declaration**

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## **WEEE Declaration for India**



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste equipment for recycling in India, please visit the below web link.

www.aocindia.com/ewaste.php.

## **RoHS Declaration for India**

his product complies with all implemented RoHS type regulations worldwide, including but not limited to, EU, Korea, Japan, US States (e.g. California), Ukraine, Serbia, Turkey, Vietnam and India. We continue to monitor, influence and develop our processes to comply with upcoming proposed RoHS type regulations, including but not limited to, Brazil, Argentina, Canada.

### **Restriction on Hazardous Substances statement (India)**

This product complies with the "India E-waste Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

## **EPA Energy Star**



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) BV and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency. (FOR EPA CERTIFIED MODELS)

# Service

## Warranty Statement for Europe

### LIMITED THREE-YEAR WARRANTY\*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section on <u>www.aoc-europe.com</u> for the warranty instructions in your country. The freight cost for the warranty is pre-paid by AOC for the delivery and return. Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to
  protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

### \* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquake and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified or Authorized Service Center will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <a href="http://www.aoc-europe.com">http://www.aoc-europe.com</a>

## Warranty Statement for Middle East and Africa (MEA)

### And

## The Commonwealth of Independent States (CIS)

### LIMITED ONE to THREE YEARS WARRANTY\*

For AOC LCD Monitors sold within the Middle East and Africa (MEA) and the Commonwealth of Independent States (CIS), AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of One (1) to Three (3) years from the manufacture date depending on sale country. During this period, AOC International (Europe) B.V. offers a Carry-In (return to Service Center) Warranty Support at an AOC's Authorized Service Center or Dealer and at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. As a Standard Policy, the warranty will be calculated from the manufacture date identified from the product ID serial number, but the total warranty will be Fifteen (15) months to Thirty Nine (39) months from MFD (manufacture date) depending on sale country. Warranty will be considered for exceptional cases that are out of warranty as per the product ID serial number and for such exceptional cases; Original Invoice/Proof Of Purchase Receipt is mandatory.

If the product appears to be defective, please contact your AOC authorized dealer or refer to the service and support section on AOC's website for the warranty instructions in your country:

- Egypt: <u>http://aocmonitorap.com/egypt\_eng</u>
- CIS Central Asia: <u>http://aocmonitorap.com/ciscentral</u>
- Middle East: <u>http://aocmonitorap.com/middleeast</u>
- South Africa: <u>http://aocmonitorap.com/southafrica</u>
- Saudi Arabia: http://aocmonitorap.com/saudiarabia

Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Authorized Service Center or Dealer under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

### \* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source

- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquakes and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified, Authorized Service Center or dealer will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF ONE (1) to THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <a href="http://www.aocmonitorap.com">http://www.aocmonitorap.com</a>



## AOC International (Europe) B.V.

Prins Bernhardplein 200 / 6th floor, Amsterdam, The Netherlands Tel: +31 (0)20 504 6962 • Fax: +31 (0)20 5046933


# AOC Pixel Policy ISO 9241-307 Class 1

July 25th, 2013

AOC strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but AOC guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This Pixel Policy explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels.

#### **Pixels and Sub Pixel Definition**

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. When all sub pixels of pixel are lit, the three colored sub pixel together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel.

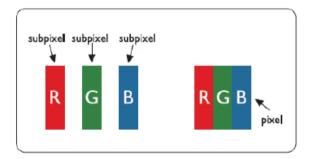

#### **Types of Pixel Defects**

- Bright Dot Defects: the monitor displays a dark pattern, sub pixels or pixels are always lit or "on"
- Black Dot Defects: the monitor displays a light pattern, sub pixels or pixels are always dark or "off".

ISO 9241-307	Defect Type 1	Defect Type 2	Defect Type 3		Defect Type 4 Black
Pixel Defect Class	Bright Pixel	Black Pixel	Bright Sub pixel		Sub pixel
			2	+	1
Class 1	1	1	1	+	3
			0	+	5

AOC International (Europe) B.V.

### Warranty Statement for North & South America (excluding Brazil)

WARRANTY STATEMENT

for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- \* Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/find\_service\_center ARGENTINA: http://ar.aoc.com/support/find service center BOLIVIA: http://bo.aoc.com/support/find\_service\_center CHILE: http://cl.aoc.com/support/find\_service\_center **COLOMBIA:** http://co.aoc.com/support/find\_service\_center COSTA RICA: http://cr.aoc.com/support/find\_service\_center DOMINICAN REPUBLIC: http://do.aoc.com/support/find\_service\_center ECUADOR: http://ec.aoc.com/support/find\_service\_center EL SALVADOR: http://sv.aoc.com/support/find\_service\_center GUATEMALA: http://gt.aoc.com/support/find\_service\_center HONDURAS: http://hn.aoc.com/support/find\_service\_center NICARAGUA: http://ni.aoc.com/support/find\_service\_center PANAMA: http://pa.aoc.com/support/find\_service\_center PARAGUAY: http://py.aoc.com/support/find\_service\_center PERU: http://pe.aoc.com/support/find\_service\_center URUGUAY: http://pe.aoc.com/support/find\_service\_center VENEZUELA: http://ve.aoc.com/support/find\_service\_center IF COUNTRY NOT LISTED: http://latin.aoc.com/support/find\_service\_center

## EASE PROGRAME



Only for AOC branded monitors sold within the continental United States.

All AOC branded monitors are now covered by the EASE Program. If your monitor malfunctions at any time during the first three months, AOC will provide a replacement monitor within 72 hours after you are

approved for our program. If your monitor qualifies for the EASE program, AOC will pay for freight both

ways.

Step 1: Phone our TECH Department at 888.662.9888.

Step 2: Fill out and return EASE registration forms by mail or fax.

Step 3: We will issue a Return Authorization Number upon verification into the program.

Step 4: A monitor will be advance shipped to your location.

Step 5: We will issue a UPS Call Tag to pick up the defective unit.

Step 6: Please review the following chart to see your EASE program qualifications.

WARRANTY	COVERAGE AT	CUSTOMER
PERIOD	NO CHARGE	CHARGES
Within the first three months of	- New AOC monitor - Call tag	- None*
purchase: Covered by EASE	dispatched and return freight	
	charges via UPS	
Between 4 months – 1 Year	- All Parts & Labor Including CRT	- UPS Return Freight to AOC
	Tube & LCD Panel	
Between 1 Year - 3 Years: Covered	- Parts & Labor (excluding CRT	- UPS Return Freight to AOC
by standard limited warranty	Tube & LCD Panel)	

\*AOC will need to obtain a credit card number if you would like to get a new AOC monitor advanced shipped to your location, prior to the defective unit arriving at AOC's service center. If you do not wish to supply a credit card, AOC will only ship the new monitor, once the defective unit arrives at the AOC service center.

