


## ENGLISH

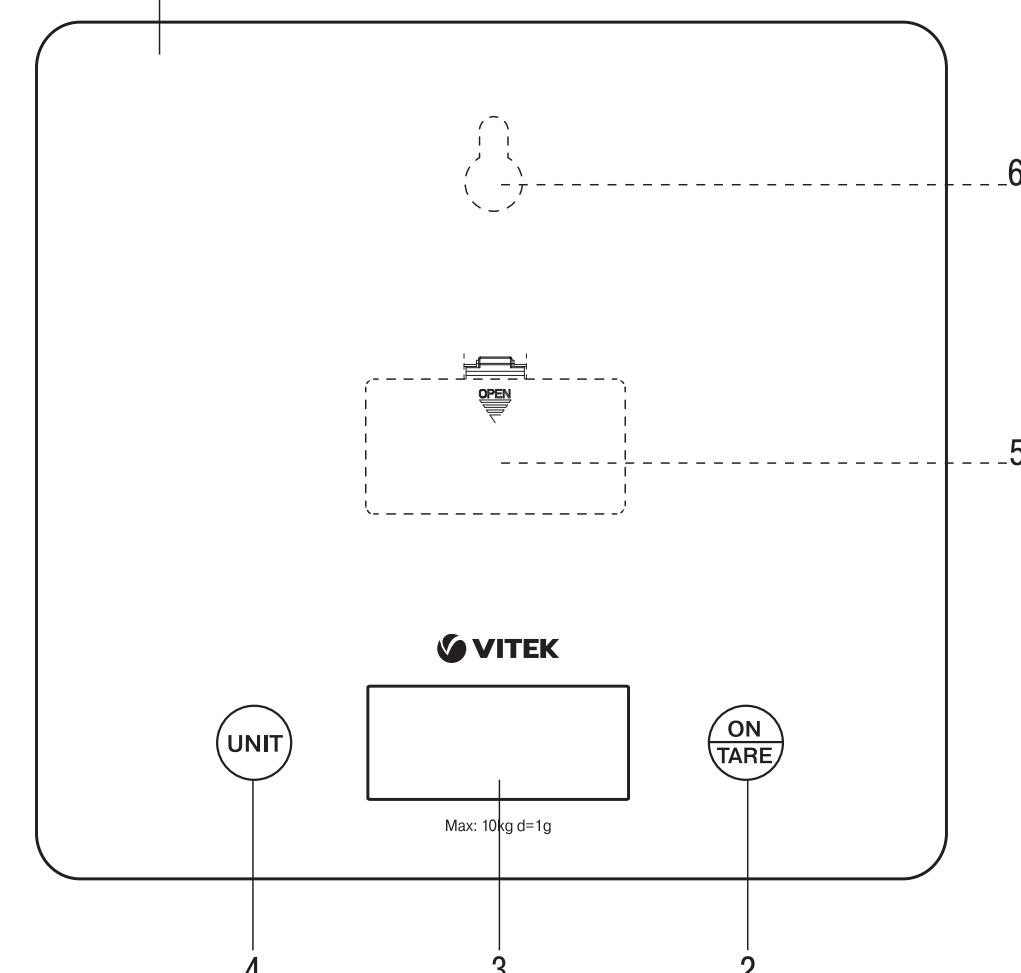

## ELECTRONIC KITCHEN SCALE VT-8034

The scale is used for weighing dry, liquid and granular products.

## DESCRIPTION

- 1. Weighing platform
- 2. ON/OFF/tare button «ON/TARE»
- 3. Display
- 4. Measurement unit selection button «UNIT»
- 5. Battery compartment lid
- 6. Hanging loop

## RECOMMENDATIONS FOR CUSTOMER ATTENTION!

Before using the unit, read these instructions carefully and keep them for future reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to her/his property.

• Hand your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, never expose it to direct sunlight and do not drop the scale.

• Avoid getting water on the scale body, this appliance is not waterproof. Do not store or use the scale in a room with high humidity (above 80%), make sure that the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.

• Place the scale on a flat steady surface.

• Adding ingredients is available until the max. capacity (10 kg).

• Remove all the ingredients from the platform, the display (3) will show the total weight of all ingredients.

• This unit is not intended for usage by children under.

• This unit is not intended for usage by people with physical, neural and mental disorders or with insufficient experience or knowledge. Such persons may use the unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.

• Do not leave children unattended to prevent using the unit as a toy.

• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

**Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunctions is detected or after it was dropped.

• Remove the battery from the battery compartment and apply to any authorized service center the address is indicated on the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

**THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY, ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

## IMPORTANT

## Electromagnetic compatibility

After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least three hours at room temperature.

• Unpack the scale, remove any stickers that can prevent unit operation.

• Clean the weighing platform (1) and the scale body with a soft slightly damp cloth and then wipe it dry.

## USING THE SCALE

The electronic scale can be sensitive to electromagnetic emission of other units located in close proximity (such as mobile phones, portable radio transmitters, radio controllers and microwave ovens). If signs of such emission appear (false or inconsistent data indication on the display), relocate the scale or switch the source of interference for some time off.

## DELIVERY SET

- 1. Scale – 1 pc.
- 2. CR2032 battery – 1 pc.
- 3. Instruction manual – 1 pc.

## BATTERY INSTALLATION

Open the battery compartment lid (5) and insert a CR2032 bat-

tery (supplied with the unit), strictly following the polarity.

• Install the battery compartment lid (5) back to its place.

**Note:** If there is an isolation insert in the battery compartment, open the battery compartment lid (5), remove the isolation insert and install the battery compartment lid (5) back to its place.

## BATTERY REPLACEMENT

When the battery is low, the symbol «» will appear on the display (3).

• Before the scale is switched off due to low battery, the symbols «» and «» will appear on the display.

• Open the battery compartment lid (5), replace the old battery with a new one, strictly following the polarity, then close the battery compartment lid (5).

• If you are not using the scale for a long time, remove the batteries from the battery compartment.

## WEIGHING INGREDIENTS

Install the scale on a flat stable surface.

1. To switch the scale on, touch the «ON/TARE» button (2) and wait until the symbol «» appears on the display.

**Notes:** The symbol «» shown on the display (3) indicates that you can start weighing.

• If the indications on the display (3) are not equal to zero, touch the «ON/TARE» button (2), the indications will be set to zero. Select required weight measurement units by touching the button (4) «UNIT», the following symbols will appear on the display (3) (3) отобразятся следующие символы:

«» – weight of product (products) in grams;

«» – weight of product(s) in ounces;

«» – water volume in milliliters;

**Notes:** Water volume is measured based on average water density values stored in the scale memory, that's why the calculated water volume may differ from the actual value.

• To weigh liquid and granular products, place an appropriate container on the platform (1) and then set the display indications to zero by touching the «ON/TARE» button (2). The tare symbol «TARE» will appear in the bottom left corner of the display (3) if the container weight is more than 100 g.

2. Put the ingredients (3) on the weighing platform (1). The weight of the ingredient(s) will be shown on the display (3), according to the selected measurement units.

3. To switch the scale off, remove the ingredients from the platform (1) and touch the «ON/TARE» button (2) for 2 seconds.

**Notes:** The scale will be switched off automatically after 45 seconds of non-operation.

## SCALE FUNCTION

If you want to measure the weight of several ingredients without removing the previous ones from the platform (1), proceed as follows.

1. Place the scale on a flat surface.

2. To switch the scale on, touch the «ON/TARE» button (2), the symbol «» will appear on the display.

3. Select the required measurement units by pressing the button (4) «UNIT», the following symbols will appear on the display (3):

«» – weight of product (products) in grams;

«» – weight of product(s) in ounces;

«» – water volume in milliliters.

4. Put the required quantity of the first ingredient on the platform (1), checking the numerical indication on the display (3).

5. Touch the «ON/TARE» button (2), the display (3) weight indica-

## ENGLISH

## 2

## ELECTRONIC KITCHEN SCALE VT-8034

The scale is used for weighing dry, liquid and granular products.

## DESCRIPTION

## 1.

## Weighing platform

## 2.

## ON/OFF/tare button «ON/TARE»

## 3.

## Display

## 4.

## Measurement unit selection button «UNIT»

## 5.

## Battery compartment lid

## 6.

## Hanging loop

## RECOMMENDATIONS FOR CUSTOMER ATTENTION!

Before using the unit, read these instructions carefully and keep them for future reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to her/his property.

• Hand your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, never expose it to direct sunlight and do not drop the scale.

• Avoid getting water on the scale body, this appliance is not waterproof. Do not store or use the scale in a room with high humidity (above 80%), make sure that the scale does not come into contact with water or other liquids as this may cause failure of scale indication or its damage.

• Place the scale on a flat steady surface.

• Adding ingredients is available until the max. capacity (10 kg).

• Remove all the ingredients from the platform, the display (3) will show the total weight of all ingredients.

• This unit is not intended for usage by children under.

• This unit is not intended for usage by people with physical, neural and mental disorders or with insufficient experience or knowledge. Such persons may use the unit only if they are under supervision of a person who is responsible for their safety and if they are given all the necessary and understandable instructions concerning the safe usage of the unit and information about danger that can be caused by its improper usage.

• Do not leave children unattended to prevent using the unit as a toy.

• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

**Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunctions is detected or after it was dropped.

• Remove the battery from the battery compartment and apply to any authorized service center the address is indicated on the warranty certificate and on the website [www.vitek.ru](http://www.vitek.ru).

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

**THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY, ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.**

## IMPORTANT

## Electromagnetic compatibility

After unit transportation or storage under cold (winter) conditions, it is necessary to keep it for at least three hours at room temperature.

• Unpack the scale, remove any stickers that can prevent unit operation.

• Clean the weighing platform (1) and the scale body with a soft slightly damp cloth and then wipe it dry.

## DELIVERY SET

## 1.

## Scale – 1 pc.

## 2.

## CR2032 battery – 1 pc.

## 3.

## Instruction manual – 1 pc.

## BATTERY INSTALLATION

Open the battery compartment lid (5) and insert a CR2032 bat-

tery (supplied with the unit), strictly following the polarity.

• Install the battery compartment lid (5) back to its place.

**Note:** If there is an isolation insert in the battery compartment, open the battery compartment lid (5), remove the isolation insert and install the battery compartment lid (5) back to its place.

## BATTERY REPLACEMENT

When the battery is low, the symbol «» will appear on the display (3).

• Before the scale is switched off due to low battery, the symbols «» and «» will appear on the display.

• Open the battery compartment lid (5), replace the old battery with a new one, strictly following the polarity, then close the battery compartment lid (5).

• If you are not using the scale for a long time, remove the batteries from the battery compartment.

## WEIGHING INGREDIENTS

Install the scale on a flat stable surface.

1. To switch the scale on, touch the «ON/TARE» button (2) and wait until the symbol «» appears on the display.

**Notes:** The symbol «» shown on the display (3) indicates that you can start weighing.

• If the indications on the display (3) are not equal to zero, touch the «ON/TARE» button (2), the indications will be set to zero. Select required weight measurement units by touching the button (4) «UNIT», the following symbols will appear on the display (3) (3) отобразятся следующие символы:

«» – weight of product (products) in grams;

«» – weight of product(s) in ounces;

«» – water volume in milliliters;

**Notes:** Water volume is measured based on average water density values stored in the scale memory, that's why the calculated water volume may differ from the actual value.

• To weigh liquid and granular products, place an appropriate container on the platform (1) and then set the display indications to zero by touching the «ON/TARE» button (2). The tare symbol «TARE» will appear in the bottom left corner of the display (3) if the container weight is more than 100 g.

2. Put the ingredients (3) on the weighing platform (1). The weight of the ingredient(s) will be shown on the display (3), according to the selected measurement units.

3. To switch the scale off, remove the ingredients from the platform (1) and touch the «ON/TARE» button (2) for 2 seconds.

**Notes:** The scale will be switched off automatically after 45 seconds of non-operation.

## SCALE FUNCTION

If you want to measure the weight of several ingredients without removing the previous ones from the platform (1), proceed as follows.

1. Place the scale on a flat surface.

2. To switch the scale on, touch the «ON/TARE» button (2), the symbol «» will appear on the display.

3. Select the required measurement units by pressing the button (4) «UNIT», the following symbols will appear on the display (3):

«

