



ENGLISH

ELECTRIC APPLIANCE FOR HEATING LIQUIDS (KETTLE) VT-7020 ST

The liquid heating appliance (kettle) is intended for boiling drinking water only.

DESCRIPTION

- 1. Kettle body
- 2. Kettle mesh filter
- 3. Lid
- 4. Lid opening button
- 5. Handle
- 6. Water level scale
- 7. ON/OFF button •0/1•
- 8. Base
- 9. Cord storage

ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA, to install RCD, contact a specialist.

NOTES:

Before using the kettle, make sure that the on/off button (7) is tightly closed, otherwise auto switch off of the kettle is not possible.

Before removing the kettle from the base, make sure that the kettle is switched off (the on/off button (7) is in the upper position •0•).

ATTENTION!

To avoid burns by hot steam, do not bend over the kettle spout (2) while it is operating.

SAFETY MEASURES

Before using this unit, read this manual carefully and keep it for future reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Use the unit for its intended purpose only and in strict accordance with the instruction manual.

• Make sure that your home mains voltage corresponds to the voltage specified on the unit body.

• The power cord is equipped with a «Europlug»; plug it into the socket with a reliable grounding contact.

• To fill the kettle with water, take it off the base (8) and open the kettle lid (3) by pressing the lid opening button (4).

• Fill the kettle with water up to the maximal mark •MAX•, determine the water level using the scale (6).

• Close the lid (3), place the kettle on the base (8). Make sure that the kettle lid (3) is closed tightly.

• To switch the kettle on press the on/off button (7) (the button will be fixed in the lower position •1•), the illumination of the button (7) will light up.

• Once water starts boiling, the kettle will be switched off automatically, the button (7) will switch to the upper position and the illumination of the button will go out. Pour water out and repeat the water boiling procedure 2-3 times.

Notes:

• Before using the kettle, make sure that the on/off button (7) is tightly closed, otherwise auto switch off of the kettle is not possible.

• Before removing the kettle from the base, make sure that the kettle is switched off (the on/off button (7) is in the upper position •0•).

ATTENTION!

To avoid burns by hot steam, do not bend over the kettle spout (2) while it is operating.

USAGE

• Make sure that the on/off button (7) is in the upper position •0•, that means the unit is off.

• Insert the power plug into the mains socket.

• To fill the kettle with water, take it off the base (8) and open the lid (3) by pressing the lid opening button (4).

• Fill the kettle with water not below the minimal mark •MIN• and not above the maximal mark •MAX•. Determine the water level using the water level scale (6).

• Close the lid (3) and put the full kettle on the base (8).

• To switch the kettle on press the on/off button (7), the illumination of the button (7) will light up.

• Once water starts boiling, the kettle will be switched off automatically, the button (7) will go out.

• Place the kettle on a flat stable surface; do not place the kettle on the edge of the table.

• Do not direct the kettle spout at wooden furniture, electrical appliances, books and objects which can be damaged by moisture, hot steam.

• After switching the kettle off, wait for 10-20 seconds, then you can switch it on again for re-boiling.

• Before switching the kettle on, make sure that it is placed on the base evenly.

• Use only the base supplied with the unit.

• Do not let the power cord hang from the edge of the table and make sure it does not touch hot surfaces or sharp edges of furniture. You can adjust the power cord length by winding it around the base.

• When removing the kettle from the base (8), let it cool down for 10-15 minutes, then fill it with water and switch it on, the kettle will operate in normal mode.

Note:

• There is the cord storage (9) on the reverse side of the base (8). You can adjust the optimal power cord length by folding it in the cord storage in a corresponding way.

CLEANING AND CARE

• Before cleaning disconnect the unit from the mains, pour out water and let the kettle cool down.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasive detergents.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid.

• Use the kettle only for boiling drinking water, do not heat or boil any other liquids.

• Ensure that the water level in the kettle is not below the minimal mark •MIN• and not above the maximal mark •MAX•. If the water level exceeds the maximal mark, boiling water can splash out of the kettle during boiling.

• Do not touch the power cord and the power plug with wet hands.

• Do not switch the kettle on if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly or without the filter.

• Take the kettle off the base before opening the lid

